

COVERAGE	COMPONENT	PT Powertrain	P Premium	U Ultimate
ENGINE	All internal lubricated parts; engine block; engine head(s); exhaust manifold; expansion plugs; intake manifold; mounts; oil pan; super/turbocharger (only if the Super/Turbocharger option box has been checked on the front page and the surcharge has been paid); timing belt or chain; valve cover(s).	✓	✓	✓
TRANSMISSION GROUP <i>(including transfer case if four wheel drive)</i>	All internal lubricated parts within the transmission and transfer case; cooler lines (metal); mounts; throttle valve cable; torque converter; transmission and transfer case housings; vacuum modulator.	✓	✓	✓
DRIVE AXLE <i>(2 wheel drive)</i>	Drive shaft; ring and pinion gears; pinion bearings; side carrier bearings; carrier assembly; thrust washers; axle and axle bearings; wheel bearings; Universal and CV joints, except if boot is torn or missing. Drive axle housing is also covered if damage is caused by Breakdown of listed lubricated parts.	✓	✓	✓
DRIVE AXLE <i>(4 wheel and all wheel drive) (only if the 4WD/AWD option box has been checked on the front page and the surcharge has been paid)</i>	Drive shaft; ring and pinion gears; pinion bearings; side carrier bearings; carrier assembly; thrust washers; axle and axle bearings (Drive axle housing is also covered if damage is caused by a breakdown of listed lubricated parts); wheel bearings; front hub locking assemblies; Universal and CV joints, except if boot is torn or missing; shafts and bearings (Case & housing is also covered if damage is caused by a breakdown of the listed lubricated parts).	✓	✓	✓
COOLING	Water pump.	✓	✓	✓
ELECTRICAL	Alternator and starter.	✓	✓	✓
24-HOUR EMERGENCY ROADSIDE ASSISTANCE <i>(provided by Nation Safe Drivers)</i>	Towing, flat tire changing, fuel and fluid delivery, lock out service, and "jump" starting. See Section P – Emergency Roadside Assistance for coverage details.	✓	✓	✓
HYBRID ELECTRIC VEHICLES PACKAGE <i>(available only if the option box has been checked on the front page and the surcharge has been paid)</i>	Electric motor; power controller; hybrid transaxle; electronic transmission; inverter; generator(s); and electronic display monitor. Batteries are not covered.	✓	✓	✓
BRAKE GROUP	Brake booster; calipers; combination valve; lines and fittings (metal only); master cylinder; wheel cylinders.	✗	✓	✓
FRONT SUSPENSION GROUP	Front struts; ball joints; control arms; bushings and shafts; kingpins and kingpin bushings; spindles; wheel bearings.	✗	✓	✓
STEERING GROUP	All internal lubricated parts within the steering gear and power steering pump; power cylinder; steering gear and pump housing.	✗	✓	✓
ELECTRICAL GROUP	Battery; alternator; alternator voltage regulator; brake light switch; distributor; bushings, gear, housing and shaft (excludes cap, rotor and wires); horns; ignition coil; ignition switch (excludes lock cylinder and coded keys); starter: motor, solenoid and starter relay (excludes any damage to flywheel, flex plate and ring gear); and windshield wiper motor.	✗	✓	✓
AIR CONDITIONING GROUP	Accumulator; blower motor; compressor: bearings, clutch, internal parts and pulley; condenser; evaporator; receiver/dryer; compressor housing; and refrigerant ONLY if needed in conjunction with the repair of an above listed part.	✗	✓	✓
FUEL GROUP	Fuel pump; fuel tank; metal fuel lines; fuel injectors; fuel distributor; fuel injection pump; diesel injectors; diesel injector pump; and vacuum booster pump.	✗	✓	✓
ANTI-LOCK BRAKE SYSTEM	Accumulator; electronic control unit and module; hydraulic pump; isolation dump valve; relays and sensors (excludes sensor rings).	✗	✓	✓
COOLING SYSTEM	Cooling fan: blade assembly, clutch and motor; heater core; radiator; thermostat.	✗		✓
COMPREHENSIVE PACKAGE	Air conditioning: orifice tube, suction control devices and thermostatic expansion valve; antenna motor and mast (power factory installed only); door lock actuators/solenoids (power only); ignition cylinder; keyless entry system; ignition module; wiring harness; main electronic control unit; door lock switches; window switches; washer pump motor; power window: gear, motor, and regulator; and 4x4 engagement motor.	✗	✗	✓
EXCLUSIONARY COVERAGE <i>(available on used vehicle terms only)</i>	We will reimburse you or the repair facility for any necessary repair required as a result of a breakdown, except as set forth in Section H - EXCLUSIONS .	✗	✗	✓

See contract for full list of excluded parts and items. Prior authorization is required before any repairs are performed.

Claims: (888) 306-7115 • Fax: (847) 506-9534 • Office: (888) 442-2886 • Roadside Assistance: (855) 237-3819

	<p><i>RENTAL CAR COVERAGE</i></p>
	<p><i>EMERGENCY ROADSIDE ASSISTANCE *</i></p>
	<p><i>TOWING ASSISTANCE</i></p>
	<p><i>BATTERY SERVICE</i></p>
	<p><i>FLAT TIRE ASSISTANCE</i></p>
	<p><i>FUEL, OIL, FLUID AND WATER DELIVERY</i></p>
	<p><i>LOCK-OUT ASSISTANCE</i></p>
	<p><i>DIGITAL CONTRACT DETAILS</i></p>

We will pay or reimburse you up to \$35 per day for up to 7 days for a rental vehicle from a licensed facility while your vehicle is in a repair facility overnight for a covered breakdown. No deductible applies.

Available throughout the United States and Canada, 24 hours a day, 365 days a year.

When towing is necessary, your vehicle will be towed to a service facility.

If a battery failure occurs, a jump-start will be provided.

Your flat tire will be replaced with your spare tire.

A supply of fuel, oil, fluid and water will be delivered in an emergency. You only pay for the fuel

If your keys are locked inside your vehicle, we will provide assistance in gaining entry.

The **AAGI Mobile app** gives you easy access to your contract, customer service, and dealer details. Download free for iPhone® or Android™ at aagimobile.com.

* Roadside benefits provided by NSD. All emergency roadside benefits are limited to \$75 per occurrence and additional exclusions apply. See contract for complete list of coverages.